## SG-L 8065


# X-Ray Baggage Scanner



#### **Product Highlights**

- \* Linux operation system
- \* ARM cpu
- \* Digital signal and processor
- \* Continuous working 10000 hours above
- \* Energy saving design



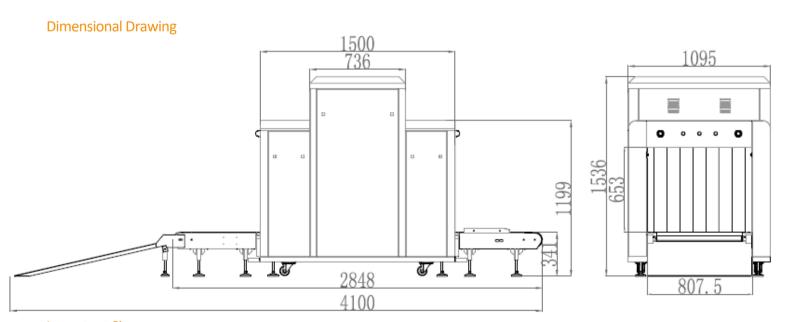

#### Important Sizes:

Product Size: 2848\* 1095 \* 1536mm (L × W × H) Tunnel Size: 807.5\* 653mm (width × height)

#### ■ General Specifications

■ Wire Resolution

Penetration resolution

■ Spatial resolution

■ Penetration

■ Resolution of organic matter

■ Grayscale and mixture resolution

■ Resolution of inorganic objects

■ Effective material resolution

■ X-Ray dosage each inspection

■ Boundary Leakage

■ S/N ratio

■ Conveyor speed

■ Conveyor max load

■ Power consumption

■ Safety performance requirements

■ EM C requirements

■ Electrical safety

■ Environmental applicability

■ Leakage current

■ Film Safety

■ Weight

■ Operation temperature/Humidity

■ Storage temperature/Humidity

■ Atmospheric pressure

■ Operation Power

■ Operation system

Typical AW G 36

Typical AW G 24

Vertical:2.0mm, horizontal:2.0mm

Typical 30mm

1-120mm

1-40mm

0.2-12mm/

Meet the requirements of G B 15208.1-2005

≤2.5µSv (uGy)

 $\leq 0.5 \mu \text{Sv /h}(\text{uGy/h})$ 

<60dB

0.2m/s

200kg

1.0K W

Meet the requirements of G B 15208.1-2005

≤5.0mA

Guarantee A S A / I S O 1600 Film

630kg

5℃-40℃/0%-90%

-20℃-60℃ /10%-90%

86kPa-106kPa A C

220V(±10%-15%) 50±3Hz

LINUX

#### General Specifications

X ray generator

Electric roller

Computer

Monnitor

Operation console

140 K V, oil cooling, from top to bottom

One- phase

Hard drive: 500G, Storage: 1G

17" L E D screen, resolution: 1280\*1024 pixels

Double screen consol

### Scanned images







#### Functional characteristics

C C C POHS

■ Power-on self-test

With the function of fault self-check, automatically judge the fault and prompt the fault code information in time.

■ Image processing

With the function of Color/ B W, negative, high/low penetration, organic /inorganic stripping, general enhancement, and pseudo color, etc.

■ Image Recall

30 preceding images recallable.

and alarm duration can be set.

■ The number of images stored

Up to 10,00 images stored automatically.

■ Real-time curve

■ Probe setting

The real-time curve can be used to detect whether the acquisition system and components work normally.

■ Time setting System time can be set

> It can realize the manual deletion of the low and low energy detection board dead pixels, and display the deleted dead pixels in the display area.

■ Ray source setting

There are two source and analog source control modes, the source parameters of the digital source can be set

■ Alarm system

The alarm function can be activated and deactivated, and the alarm type of the alarm box, sound and light alarm can be selected, and the sensitivity, minimum absorption rate, maximum absorption rate,

■ Troubleshooting

It can realize whether the components such as the entrance and exit light barrier, side panel switch, emergency stop switch and light source are normal, and display the standard value and current value of the detection voltage

■ Image setting

The drum running control direction and the image display moving direction can be set.

■ Software registration

It can realize software registration function and has serial number, registration code, registration status and system time information display.

■ User login

Log in by entering different user name and passwords, only when logging in can you make other settings.

You can add, delete, edit the user name and password, set the user level to restore the deleted user.

■ Authority management

Different default permissions can be set according to user level.

■ language settings

■ User management

The system language can be set to switch between Chinese and English.

■ Log management

User operations can be monitored to guery user actions.

■ About

The version and device number can be displayed.

■ T I P report

The report can be generated by the tip operation after the tip insertion function is turned on, and the content of the report: user name, number of tip insertions, number of tags, false positive rate, probability of detection, probability of false positives.

■ Tip management

It can be set to enable and disable the insertion of dangerous goods, and can set the identification time, Prompt time, insertion frequency, proportion of single items inserted into dangerous goods, add tip files and delete files.

■ Document management

It can guery, open, and export the checked image.

■ Function setting

It can set log level, save the file time, whether to open the training function and setting the smart roller.

■ Data setting

Display system working hours, the total working hours of the ray source, the total number of system baggage and packages, and the total number of baggage packages this time, and clear the above data.

■ System parameter setting

It can select the exported data, pictures, and backup directory, select and adjust the motor type, detector type, whether to enable the debug mode, model, and gain, enter the corresponding IP address on network connection to realize sharing function, and have corresponding software to achieve system upgrade.

#### Compliance

- International
- National \*Health Inspection Report
  - \*Computer Software Copyright Registration Certificate
  - \*Software Product Registration Certificate
  - \*Radiation Safety Certificate from Ministry of Public Security
  - \*Quality Certification from Safety and Police Electronic Products Quality Inspection Center

\*ISO19001; SO14001; ISO27001; OHSMS18001; CE, ROHS, FCC, REACH, USA, FDA

\*Design pantent certification.

